

Contents

(English Version)

I. Disclaimers, Exclusions and Limitations of Liability	pg 04
II. About this book	pg 05
III. About your Presidium Moissanite Tester (PMT II)	pg 06
IV. IMPORTANT NOTICE	pg 08
1. GETTING STARTED with your Presidium Moissanite Tester (PMT II)	pg 09
2. PERFORMING A TEST with your Presidium Moissanite Tester (PMT II)	pg 13
3. READING TEST RESULTS on your Presidium Moissanite Tester (PMT II)	pg 15
4. TAKING CARE of your Presidium Moissanite Tester (PMT II)	pg 16

I. Disclaimers, Exclusions and Limitations of Liability

PLEASE READ AND NOTE PRESIDIUM WARRANTY TERMS AND CONDITIONS as stated in the warranty card. Presidium warranty for its testers are subject to proper use by its users in accordance with all the terms and conditions as stated in the relevant user handbook and shall cover only manufacturing defects.

Due to continuous product improvement, Presidium reserves the right to revise all documents including the right to make changes to the handbook without notice and without obligation to notify any person of such revisions or changes. Users are advised to check Presidium's website at <http://www.presidium.com.sg/> from time to time.

Presidium shall not be responsible for any damage or loss resulting from the use of this tester or handbook, and under no circumstances shall Presidium, its manufacturer or any of its subsidiaries, licensors, distributors, reseller, servant and/or agent be liable for any direct or indirect damages, resulting from the use of this tester.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, under no circumstances shall Presidium, its manufacturer or any of its subsidiaries, licensors, distributors, reseller, servant and/or agent be responsible for any special, incidental, consequential or indirect damages howsoever caused.

The tester or Presidium Moissanite Tester (PMT) referred to in this handbook is provided and/or sold on an "as is" basis. Except as required by applicable law, no warranties of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

II. About this book

Thank you for purchasing the Presidium Moissanite Tester (“PMT II” or “tester”).

This handbook is designed to help you set up your tester and describes all you need to know about how to use your tester accurately and take care of it in line with its requirements. Please read these instructions carefully and keep them handy for future reference.

This book also contains the terms and conditions in relation to the use of the tester including the **Disclaimer, Exclusion and Limitation of Liability clauses stated above in Section I.**

III. About your Presidium Moissanite Tester (PMT II)

The Presidium Moissanite Tester has been developed to identify moissanite using the combined principles of electrical conductivity. Moissanite, also known as silicon carbide (SiC), is similar to diamond in many aspects, except its electrical conductivity. Thus, its capacity to conduct electricity allows segregation between Diamond and Moissanite.

The Presidium Moissanite Tester is recommended to be used after the indication of a positive test result from the use of Presidium Thermal conductivity testers.

The Presidium Moissanite Tester has been subjected to thorough and extensive laboratory tests, and will generally give a clear and reliable reading of the gemstone being tested under proper use. However, you are advised to conduct further supporting tests.


This tester is not meant to distinguish between colored gemstones or any other types of synthetic Diamonds.

The Presidium Moissanite Tester features the following:

- Highly-sensitive probe made of special grade polymer
- Clear and easy-to-read LED display
- Powered by 3 x AAA batteries
- Low power consumption
- Low battery indicator
- Portable and lightweight

Included in your package:

- Presidium Moissanite Tester (PMT II)
- Metal stone rest
- Quick Guide
- QR Code Card
- Protective carrying case

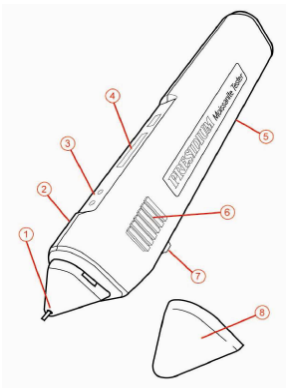

1	Probe Tip
2	Test Button
3	Power Indicator LED
4	Display Panel
5	Battery Compartment
6	Serrated Plated Part
7	ON/OFF Switch
8	Probe Protective Cap

IV. IMPORTANT NOTICE

- Keep the tester dry. Precipitation and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your tester gets wet, remove the battery, and allow the tester to dry completely before replacing it.
- Do not use, store or expose the tester in dusty and dirty areas. Its moving parts and electronic components can be damaged.
- Do not use, store or expose the tester in hot areas. High temperatures can damage or shorten the life of the tester, damage batteries, and warp or melt certain plastics.
- Do not use, store or expose the tester in cold areas. When the tester returns to its normal temperature, moisture can form inside the tester and damage electronic circuit boards.
- Do not attempt to open the tester other than as instructed in this handbook.
- Do not drop, knock, or shake the tester. Rough handling might break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the tester.
- Do not paint the tester. Paint can clog the moving parts and prevent proper operation.

If the tester is not working properly, kindly contact Presidium Customer Service at service@presidium.com.sg or:

Presidium Instruments Pte Ltd
Unit 7, 207 Henderson Road
Singapore 159550
Attn: Customer Service Executive

1. GETTING STARTED with your Presidium Moissanite Tester (PMT II)

Powering up your Presidium Moissanite Tester

This tester can be powered by either the use of an AC adaptor (optional item sold separately) or through the use of batteries. If AC adaptor is used, connect one end of the AC adaptor to the tester (**Fig 1.1**) and the other end directly into a suitable electrical outlet. Please ensure that only the adaptor supplied by Presidium is used.

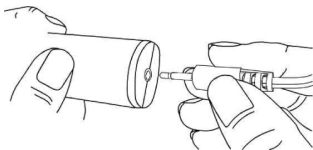


Fig. 1.1

If batteries are used (3 x AAA batteries), take note of the positive (+) and negative (-) directions of batteries when inserting the batteries into the tester (**Fig. 1.2**). The use of alkaline batteries is preferred, as it should generally give approximately two and a half hours of continuous operation, while the use of ordinary batteries will give a shorter working life.

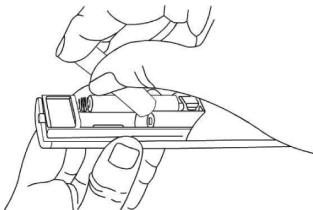


Fig. 1.2

Turning on your Presidium Moissanite Tester (PMT II)

Remove the protective cap from the probe tip (**Fig. 1.3**).



Fig. 1.3

Slide the switch to the ON position (**Fig. 1.4**). When "READY" on the display panel lights up, the tester is now ready for immediate use (**Fig. 1.5**).

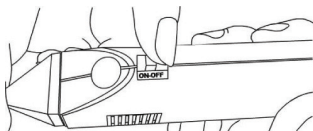


Fig. 1.4

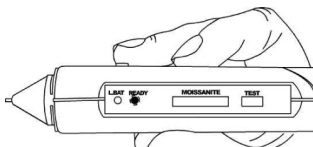


Fig. 1.5

The tester will shut down automatically after 10 minutes of inactivity.

Calibration

All testers have been calibrated during the manufacturing process and no further adjustment or user intervention to the unit is required.

Self-calibration should not be attempted. To minimize any risks associated, users should contact Presidium at service@presidium.com.sg or its service center for assistance. In the event that users require the manufacturer to re-calibrate the unit, the users will bear the associated to/fro freight cost for the shipping of unit to the service center.

Recommended testing conditions

The gemstone should be clean and dry before testing. However, elaborate cleaning procedures are not normally necessary (**Fig. 1.6**).

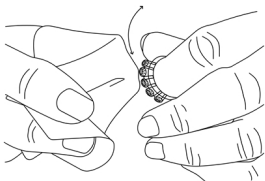


Fig. 1.6

The recommended testing temperature is 18°C – 27°C or 65°F- 80°F Please allow the gemstone or jewelry piece to adjust to room temperature prior to testing.

Exposure and/or operation of the tester outside the room temperature would affect the results and performance of the tester.

Battery information

Do not leave worn out batteries in the battery compartment as the batteries may corrode, leak or damage the tester. Batteries should be removed when the instrument is expected to be stored for an extended period of time.

To prevent inaccurate readings, replace with new batteries as soon as the low battery indicator lights up or starts to blink. A test should not be performed when the battery power is low or weak.

Batteries do not have to be removed when the AC adaptor is in use.

Cleaning your gemstone prior to testing

Prepare a clean tissue. Carefully retrieve the gemstone with tweezers and place the gemstone face down on the table (**Fig. 1.7**).

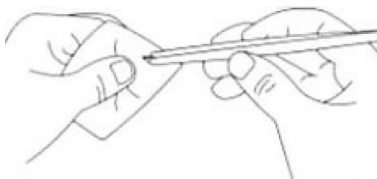


Fig. 1.7

Gently rub the table of gemstone against the tissue/ jewellery cloth (**Fig. 1.8**).



Fig. 1.8

2. PERFORMING A TEST with your Presidium Moissanite (PMT II)

Place the tip of the probe pen against the gemstone and apply sufficient pressure on the tip for correct reading.

For mounted jewelry or gemstones:

Hold the jewelry or gemstone with one hand and the tester with the other hand (**Fig. 2.1**). For proper operation of the tester, the thumb and index finger must always be placed on the rubberized anti-slip grip located on both sides of the tester at all times. Care should be taken when testing mounted jewelry. User must ensure that the stones are securely mounted before conducting a test as gap between stone and setting might lead to inaccurate reading.

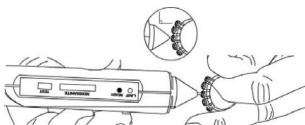


Fig. 2.1

For testing loose gemstones:

Place the gemstone on the metal stone rest and hold the metal stone rest with one hand while holding the tester with the other hand (**Fig. 2.2**).

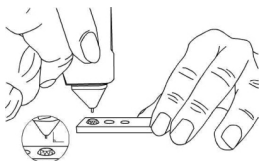


Fig. 2.2

Tips for using your Presidium Moissanite Tester

The probe tip must be placed at a right angle or perpendicular to the facet of the gemstone for an accurate reading.

Tests should be conducted on the table of the gemstone. In the event of any doubt, kindly test on the girdle of the gemstone instead.

For proper operation of the tester, fingers must be placed on the metal-plated serrated part located on both sides of the tester at all times.

To achieve optimum accuracy for tests involving very small mounted gemstones (1.2 mm exposed diameter and below), it is extremely important that no contact is made on any mounted/ metal part of the jewelry piece. The test results will likely result in confusion, as metal is highly conductive and results may indicate that a Moissanite is detected instead.

To achieve optimum accuracy for tests involving very small gemstones (10 points and below), it is important to allow the gemstone to cool down before subsequent tests.

It is advisable to take multiple readings if any doubt exists regarding the test results indicated.

Cleaning the probe tip

Please note that if the tester is being used for the first time, or if the tester has not been used for a week, it is advisable to clean the probe tip using a piece of paper to attain a consistent and accurate reading.

- Ensure the unit is switched off.
- Hold the probe pen with the pen tip forming a right-angle (90 degree) with any paper or stone rest (optional item). Gently move in a circular motion without retracting the tip (**Fig. 2.3**).
- Repeat the same motion several times. The cleaning process is completed and the tester is now ready for use.



Fig. 2.3

3. READING TEST RESULTS on your Presidium Moissanite (PMT II)

- Moissanite is detected when the display panel marked “SIMULANT” lights up with a short audible beep.
- Other material or gemstone is detected when the display panel marked “TEST” lights up and then disappears.
- Please note that metal is highly conductive and if placed in contact with the probe tip, it will yield the same results as a Moissanite gemstone.

4. Taking care of your Presidium Moissanite Tester (PMT II)

- The probe and wire tip is extremely sensitive and should be handled with care, especially during the removal of the protective cap from the pen tip. Always replace the protective cap of the pen tip when the probe is not in use. Caution should be taken so as not to damage the probe and wire tip.
- Do not leave worn out batteries in the battery compartment as the batteries may corrode, leak or damage the tester. Batteries should be removed when the tester is expected to be stored for an extended period of time.

Your tester is a product of extensive design and craftsmanship and should be treated with care.

Thank you for taking time to go through the user handbook which will enable you to understand your recent purchase better.

Presidium also recommends that you register your warranty by sending the warranty registration card to us or registering online at <http://www.presidium.com.sg/>